

# User Manual for IP Camera's Remote View


## Please refer to the notes below before use:

1. The IP camera can be used with a NVR for preview, recording and playback.
2. The IP camera can also be used independently for preview. And if it supports TF card storage, it can also be used for recording and playback.
3. Before you use a new IP camera independently for video surveillance, you need to activate it first. You can activate your IP camera by mobile app, IE, SADP , PC software, or NVR.

If you want to use a new IP camera independently for video surveillance, please follow steps below:


## Step 1: Download and install the mobile APP

1. Connect your phone to Wi-Fi, search and download APP "Ananke Vision" from APP store or Google play. Then install and open the app.

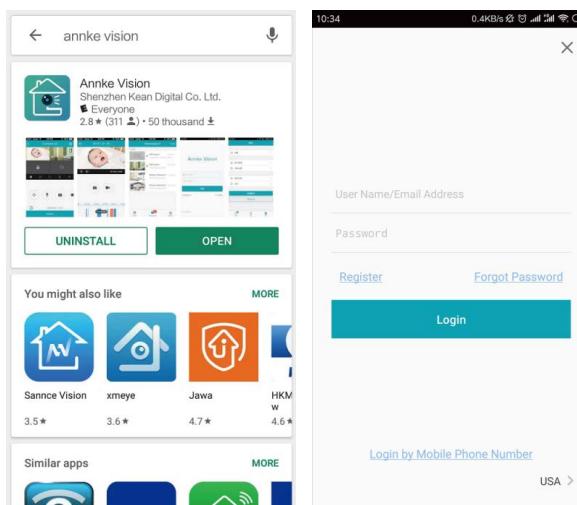

2. Click "Register" to sign up for an account by your mobile phone number or email address step by step, then please click "Login" after you registered successfully.

Note: Please select the correct country/region when you register an account; it cannot be changed once selected.

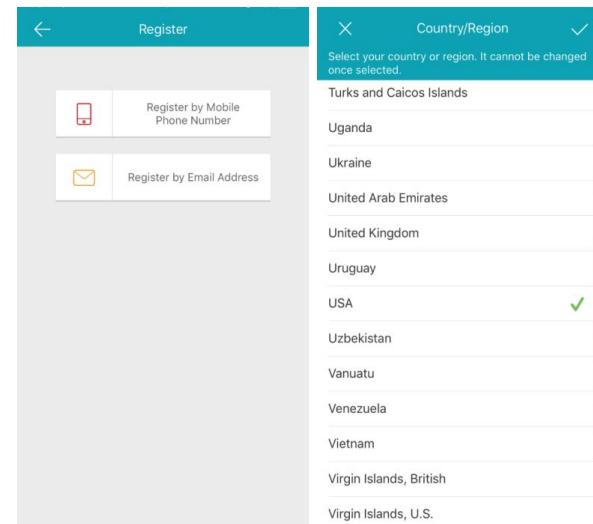


## Step 2: Power on the device


Power on the camera with your DC12V power supply, connect the camera to your router with a network cable that can be connected to the Internet.

## Step 3: Add the device onto your phone

1. Open the APP, click " + " or the " + " button in the upper right corner to add the device. Scan the bar code in the label of camera or box.

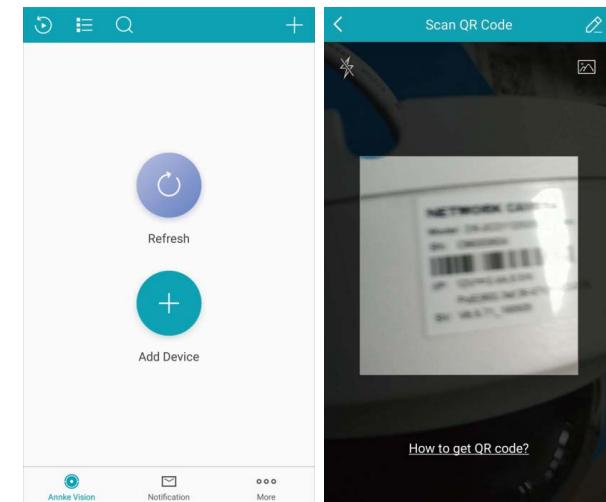

2. If the camera has not been activated before, it will prompt "The device is offline". Click "Connect to a Network", make sure the camera has been connected to a router, then click "Connected and Next".

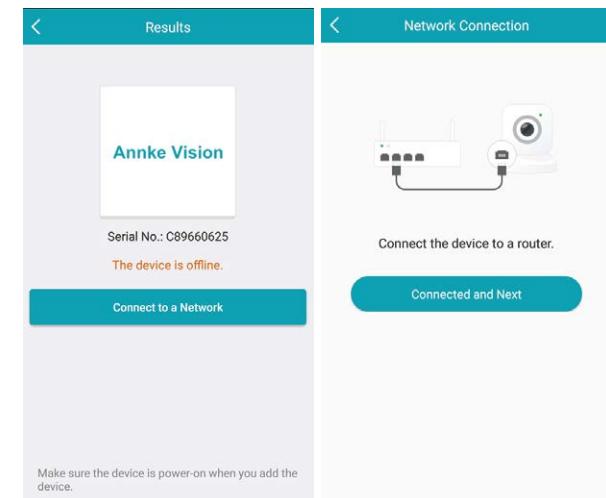

3. Then it will connect to the network. Please set a device password to activate it, and keep it well.

Add Device

Activate Device

The device is not activated. Set the device password to activate it.

.....

8 to 16 characters, including two or more of the following character types: numerics, upper case letters, lower case letters, and special characters

Activate

Connecting to the network.

4. Now please enable Annke Vision service. Tick "Read and Agree Annke Vision Terms of Service", click "next", then set a verification code for your camera and keep it well. After that, please click "Enable Annke Vision Service".

Enable Annke Vision Service

Create Verification Code

When the Annke Vision service is enabled, the device video will be encrypted automatically. Set the verification code for the encryption.

.....

6 to 12 Letters (Case-Sensitive) or Digits

Enable Annke Vision Service

Read and Agree Annke Vision Terms of Service

Next

5. Then the device will added to your account soon.

Add Device

Connecting to the network.

87%

Adding Completed

Configure DDNS ?

Next

7. You can click the "..." button in the top right corner to access the camera's settings interface, modify the device name, change the time zone, etc. If the IP camera supports TF card, there will be storage status prompt the first time you insert the card. You need to click "Initialized" to format the new TF card before recording.

Settings

Initialize Storage

Storage1  
Not Initialized

Initialize

Device Time

Time Zone UTC+08:00 >

Date Format MM-DD-YYYY

Alarm Notification Disable >

Storage Status >

Device Version V5.5.83 build 190313  
No new version available.

Image and Video Encryption ON


Change Verification Code >

Configure DDNS Not Set >

After DDNS being enabled, the devices will be accessed via IP address in priority, and remote configuration will be supported.

You must initialize the device storage before it can save videos.

6. After the device is added, it will appear in the device list. You can click to access the live preview. You can also adjust the preview image resolution to HD, take snapshots, record to your phone, etc.

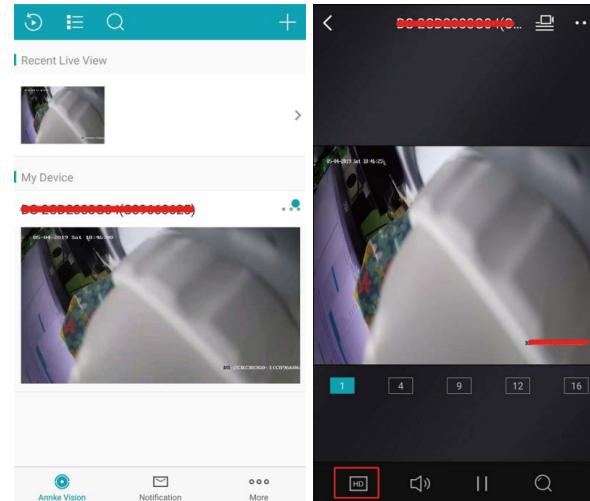

For more information, please visit:

[www.annke.com](http://www.annke.com)



Manufacturer: Shenzhen Kean Digital co., Ltd.  
Address: 10th Floor, Rujun Building, NO. 105, The Center Road, Bantian Street, Longgang District, Shenzhen, 518129, China  
For technical help please visit [help.annke.com](http://help.annke.com)  
Tech support: [support@annke.com](mailto:support@annke.com)



Made in China